

APPENDIX 13.4 TROUBLESHOOTING

The OUTPUT BOX has diagnostic LED's to tell you when the system is operating and to assist in diagnosing problems.

The diagrams below set out the LED connections so that you can do your own troubleshooting where possible.

Please call for RMSD service support if you cannot locate or fix your problem.

When the system is operating correctly the operational LED's on the OUTPUT BOX should be lit to show what pattern you are painting and which output is being used. If there is a problem in your system check to see that the correct LED's are lit.

The diagram below shows the OUTPUT BOX LED's in more detail.

Note: The OUTPUT BOX LED's only light up when the system is operating.

