


DC Power Inlet

 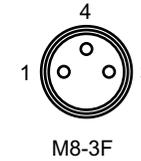


Pin	Definition	Colour
1	+V	Yellow (or Blue)
3	-V	Black
4	Ignition	White

1. Connect +V and Ignition together, and connect to isolated and fused supply.
2. Connect -V and Shield together, and connect to battery negative.

COM 1 (RS232)

1. Plug D9F-10M cable into COM 1 port.
2. This cable connects to the Expansion Port 1 of the LX10 Controller. Extension cables and Y-cables are available.



D9F-10M Cable (P/N: RP140)

